


# How to access AViPAS camera via IP




## WINDOWS:

Connect the camera to your computer directly via an Ethernet cable.


On the bottom-right corner of your desktop, right click on the Network icon, then click on the “Open Network and Sharing Center”.

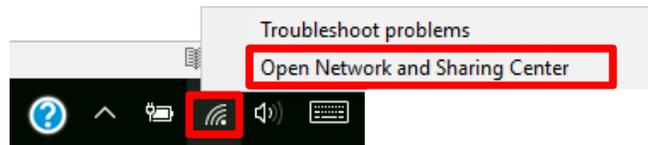

Click on “Ethernet2” -> “Properties” -> double click on “Internet Protocol Version 4(TCP/IPv4)”.

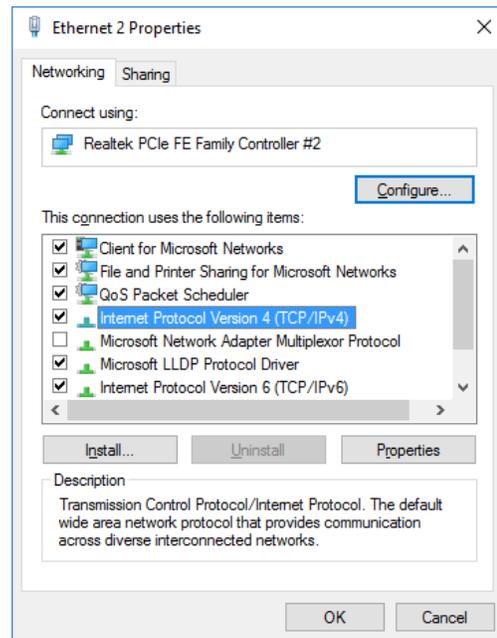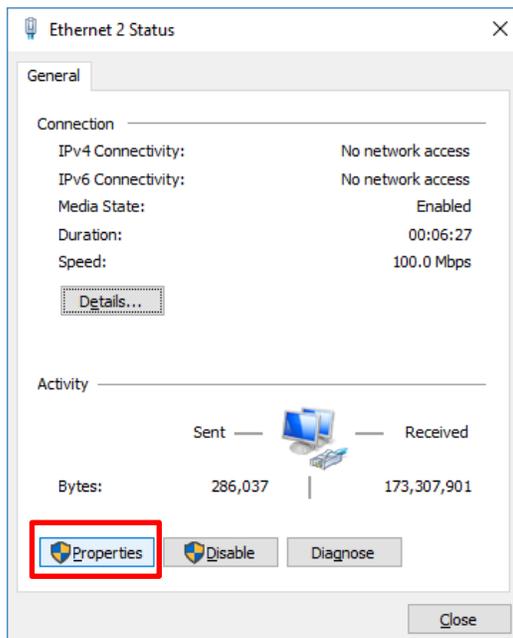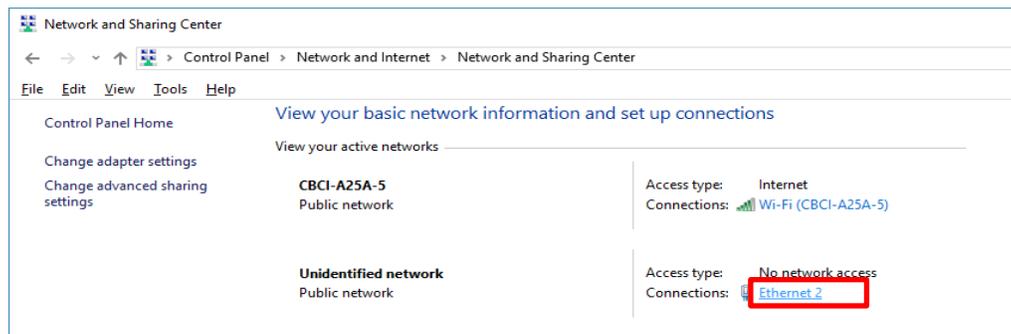


For WINDOWS10 users:

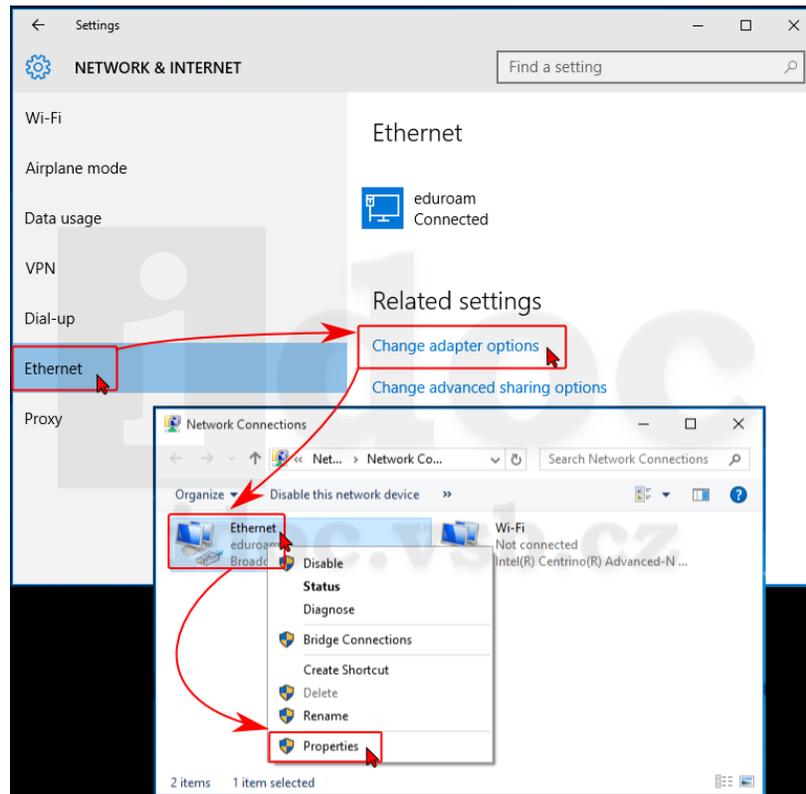


Choose “Use the following IP address”, change **computer “IP address”** (referred to as **IP1**) to be consistent with the **camera IP address** (referred to as **IP2**).

For example, **AV-1560/1360/1071/1070 series** default IP address (IP2): 192.168.100.88, thus the user may change the computer IP address (IP1) to 192.168.100.80. Default gateway: 192.168.100.1. Make sure the first 3 sections are the same. Subnet mask: 255.255.255.0. Click “OK”.

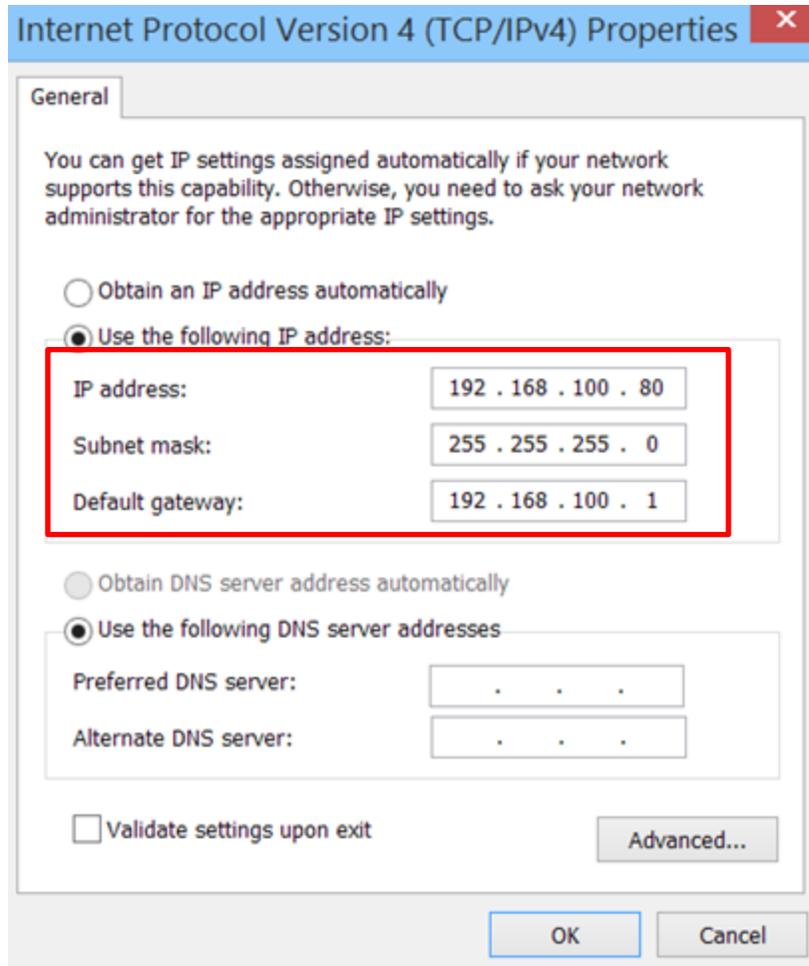


Open **IE browser**, input **192.168.100.88** in the address bar, log in with username: **admin**, password: **admin**. VLC ActiveX plugin needs to be enabled to see the camera's preview.

**AV-1082/1081/1080/1250/1251/1281/1280/1362/1361's** default IP address (IP2): 192.168.5.163, thus the user can change the computer IP address (IP1) to 192.168.5.160. Default gateway: 192.168.5.1. Make sure the first 3 sections are the same. Subnet mask: 255.255.255.0. Click "OK".

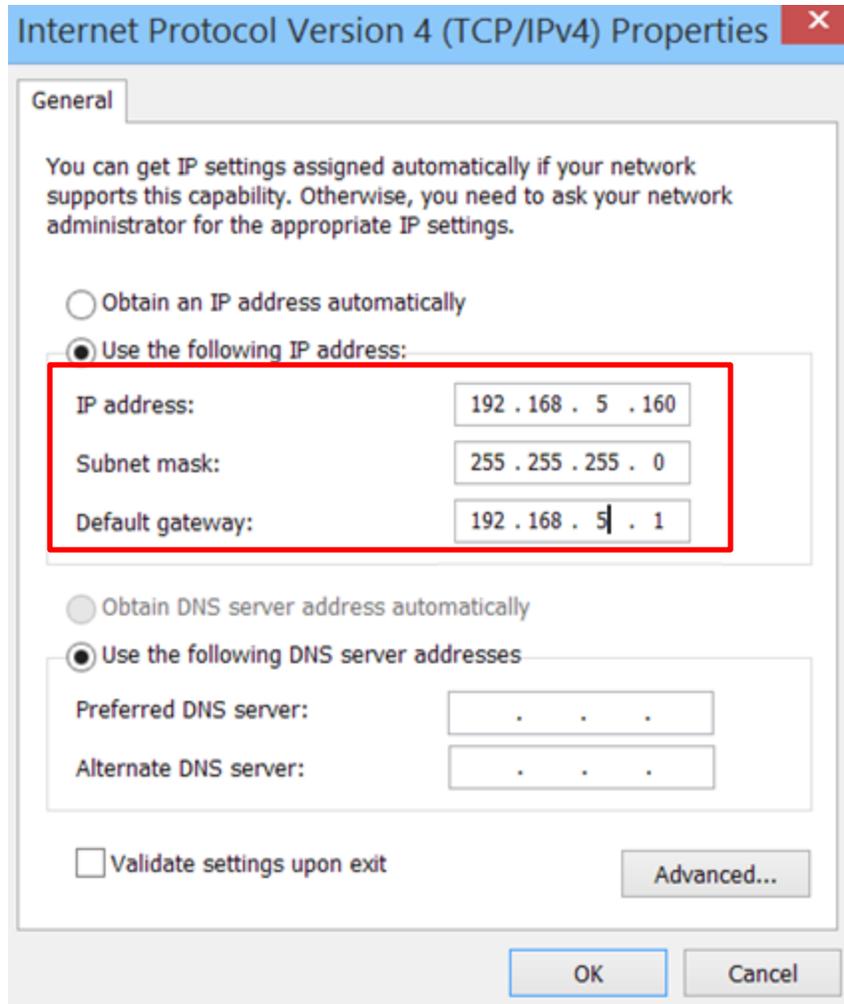

Open a browser (IE, Firefox or Chrome), input **192.168.5.163** in the address bar, log in with user name: **admin**, password: **admin**. To be able to see the camera's preview, Flash player needs to be enabled.

**AV-2020's** default IP address (IP2): 192.168.1.188, thus the user can change the computer IP address (IP1) to 192.168.1.100. Default gateway: 192.168.1.1. Make sure the first 3 sections are the same. Subnet mask: 255.255.255.0. Click "OK".

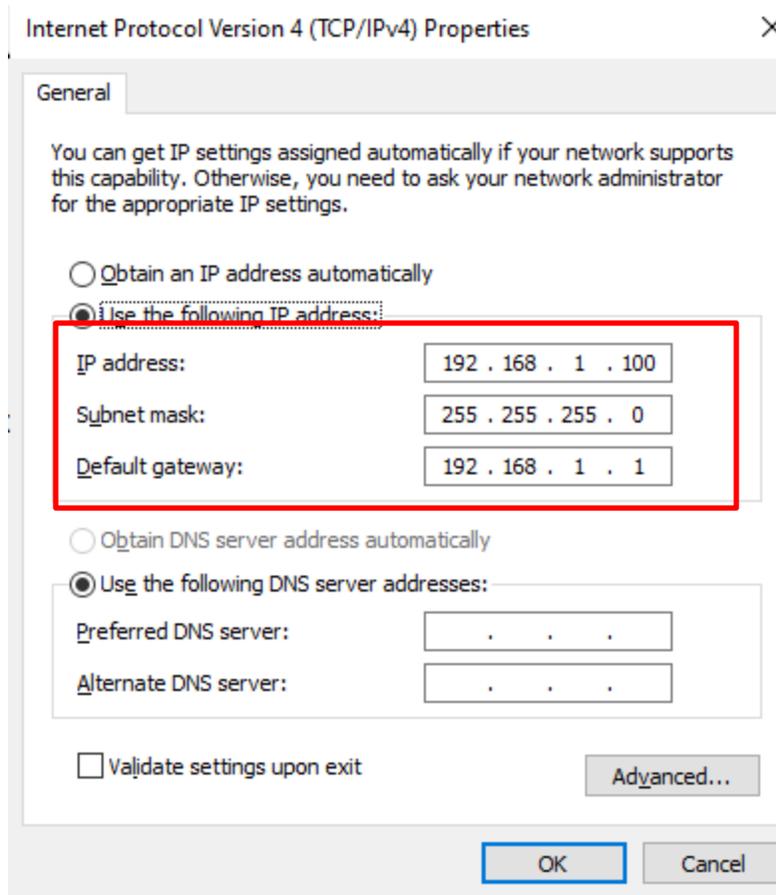


Open a browser (IE, Firefox or Chrome), input **192.168.1.188** in the address bar, log in with user name: **admin**, password: **admin**. To be able to see the camera's preview, Flash player needs to be enabled.

### For MAC:

Connect the camera with your computer via Ethernet cable.

From the Apple menu, select System Preferences.

Select Network. The window shown below appears.

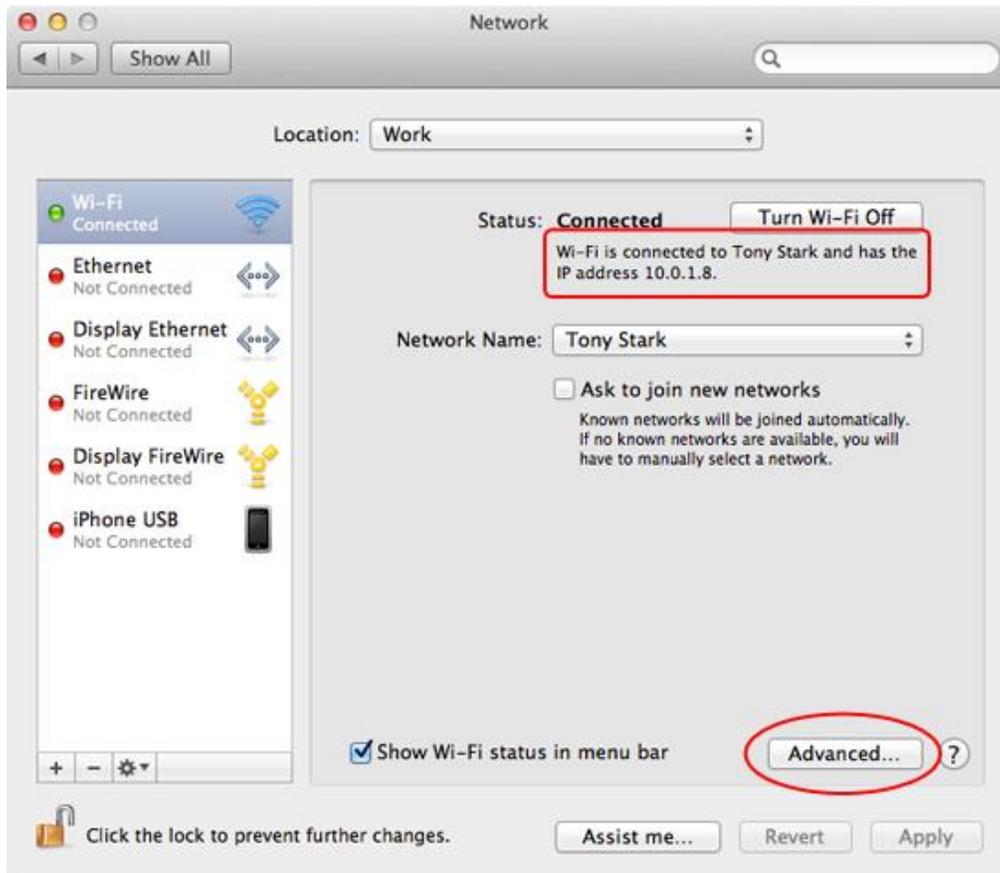


From the sidebar, select an active network interface. When the camera is connected to your Mac, both Wi-Fi and Ethernet options should be active.

Select **Wi-Fi** first, make a note of the current IP address assigned to your Mac. That's your **router's IP address** (referred to as **IP1**).

Then select **Ethernet**. Click **Advanced**.

Select **TCP/IP**. The window shown below appears.

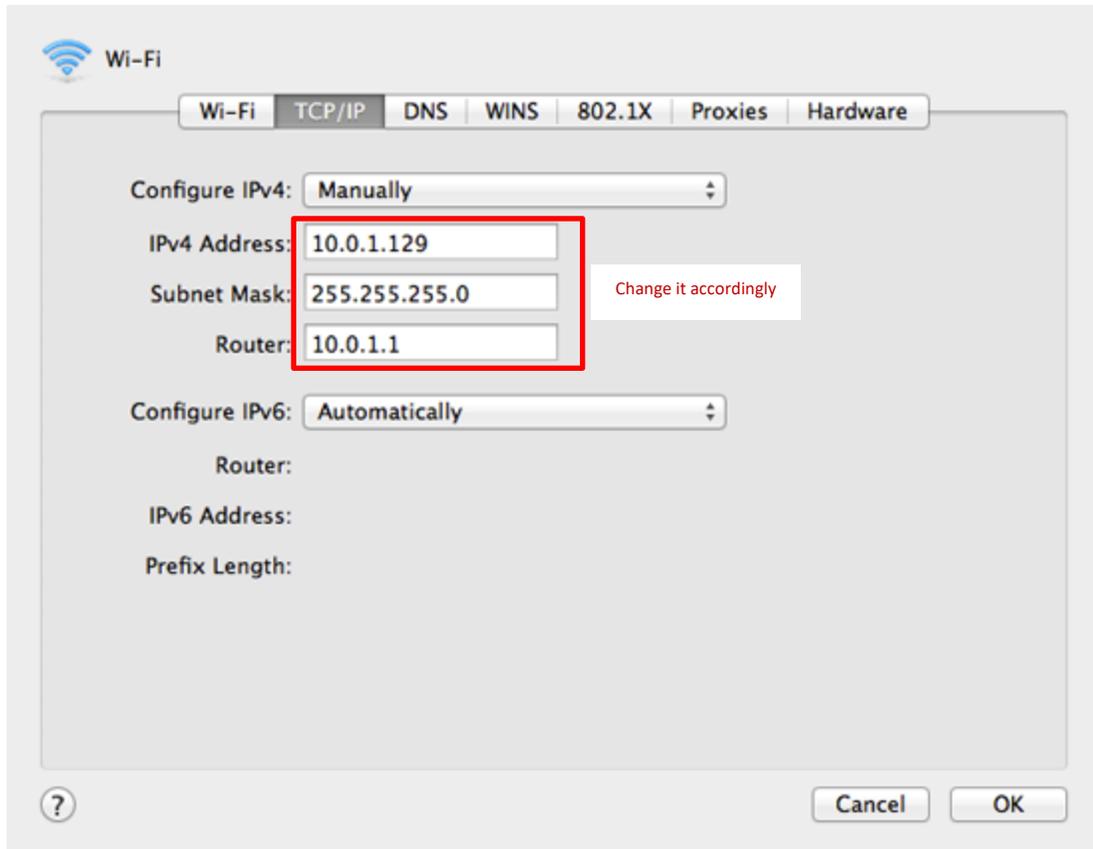

From the **Configure IPv4** menu, select **Manually**.

Change **IPv4 Address** (referred to as **IP2**) to be consistent with the **camera IP address** (referred to as **IP3**). For example, **AV-1560/1070 series** default IP address (IP3): 192.168.100.88, thus the user may change the computer IP address (IP2) to 192.168.100.80. Router: 192.168.100.1. Make sure the first 3 sections are the same. Subnet mask: 255.255.255.0. Click "OK", then "Apply".

**AV-1361/1362/1080/1280/1250 series** default IP address (IP3): 192.168.5.163, thus the user may change the computer IP address (IP2) to 192.168.5.160. Router: 192.168.5.1. Make sure the first 3 sections are the same. Subnet mask: 255.255.255.0. Click "OK", then "Apply".

**AV-2020 series** default IP address (IP3): 192.168.1.188, thus the user may change the computer IP address (IP2) to 192.168.5.100. Router: 192.168.1.1. Make sure the first 3 sections are the same. Subnet mask: 255.255.255.0. Click "OK", then "Apply".